

 
KinderSign - Connect the Android Tablet to WiFi

The WiFi Connection for your Android tablet is normally set during the initial setup of the Device. If you need to change the original WiFi Connection:


- A** Tap the **Settings** icon on the tablet home screen.



- B** Tap **Connections** and make sure WiFi is turned on.



 - C** Tap the name of the secure WiFi network you would like to join.



- D** Enter the password for the secure WiFi network, then tap **Connect**. Check the signal strength on the top right corner of the tablet screen to confirm the tablet is connected to WiFi.



- E** Once you confirm the connection, navigate back to the Home screen.